

Инструкция джакузи

MASSAGE BATHTUB

INSTALLATION&OPERATION MANUAL

Технические характеристики.

Напряжение 110-220 Вольт

Рабочая частота 60-50 Герц

Мощность водяного насоса 750-1125 Ватт

1) Установка электрооборудования:


Предохранитель подключается к источнику питания, эл. цепь фиксируется и заземляется.

Площадь поперечного сечения провода должна быть не менее 2,5 мм² а эл. проводка должна соответствовать требованиям безопасности, принятым на территории данной страны.

2) А---Название составных частей:

(Прямоугольные модели)

1. Душ
2. Кран
3. Переключатель для холодной воды
4. Трехходовой переключающий клапан
5. Переключатель для горячей воды
6. Подушка
7. Массажный патрубков
8. Регулятор подачи воздушной струи
9. Переключатель для воздушного насоса
10. Микрофон/динамик
11. Подлокотник
12. Полочка для полотенец

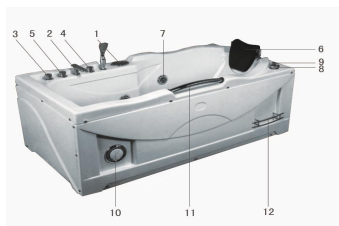

В----Название составных частей:

(Corner модель)

1. Переносной душ
2. Переключатель для горячей воды
3. Гидрораспределитель
4. Переключатель для холодной воды
5. Водоотводное отверстие
6. Компьютерная панель управления
7. Выпускное отверстие для пузырей
8. Подушка
9. Динамик, микрофон
10. Полочка для полотенец



3) Подключение водопроводу

а) Водопровод

Перед отправкой с фабрики патрубков цилиндра присоединяют к внутренней стороне ванны.

Покупателю остается лишь присоединить внешние трубы для подачи холодной и горячей воды к соответствующим трубам домашнего водопровода. Трубы убирают за ванну, чтобы их не было видно.



б) Слив

Соедините сточную трубу и слив, как показано на рисунке:

в) Схема подключения к водопроводу:



4) Эксплуатация

а) подключите к источнику питания

б) Поверните переключатель холодной и горячей воды, установите для себя оптимальный температурный режим

в) Когда уровень воды будет выше патрубка, вы можете включать водяной насос, чтобы активизировать функцию гидравлический массаж.

г) Интенсивность массажа регулируется при помощи воздушного регулировочного клапана.

д) Повернув кран, вы сможете активизировать функцию душевой массаж.

е) По окончании водных процедур, отключите насос и спустите воду.

ж) Отключите питание.

5) Чистка и уход

Процедура чистки поверхности джакузи аналогична той, что применяется для ухода за обычной ванной.

За исключением хромированных деталей, которые не нуждаются в частой чистке с использованием специальных средств.

6) Проблемы

Не работает водяной насос.

- | | |
|---------------------------------|--|
| 1. Не включено питание | 1. Подключить питание |
| 2. Загрязнена крыльчатка насоса | 2. Почистить |
| 3. Выключен насос | 3. Включить |
| 4. Сломался водяной насос | 4. Отремонтировать или заменить. |
| 5. Поврежден воздушный насос | 5. Закрепить или проверить переключатель |
| 6. Неплотно прилегает розетка | 6. Включить розетку до упора |

Не работает водяной насос.

- | | |
|---|------------------------------------|
| 1. Не достаточно эл. Питания | 1. Проверьте напряжение в сети |
| 2. Переключатель воздушного насоса ослаблен | 2. Закрепите воздушный патрубок |
| 3. Переключатель поврежден или выключен | 3. Проверьте переключатель воздуха |

Невозможно установить интенсивность гидромассажа

- | | |
|---|--|
| 1. Недостаточное напряжение в сети | 1. Проверьте воздушный переключатель |
| 2. Переключатель отключен или сломан | 2. Проверьте или замените его |
| 3. Перекрыто заднее отверстие для подачи воды | 3. Прочистите заднее отверстие для подачи воды |

Ванна находится под наклоном

- | | |
|---|------------------------------|
| 1. Неправильно отрегулированы ножки ванны | 1. Отрегулируйте ножки ванны |
|---|------------------------------|

Утечка воды

- | | |
|------------------------------------|-----------------------------------|
| 1. Поврежден уплотнитель | 1. Замените кольцевой уплотнитель |
| 2. Не закрыта муфта | 2. Хорошо закройте муфту |
| 3. Плохое уплотнение между стыками | 3. Хорошо промажьте клеем стыки |

MASSAGE BATHTUB INSTALLATION&OPERATION MANUAL

TECHNICAL PARAMETER

Rated voltage(V): 10—220

Rated frequency(HZ): 60-50

Water-pump power(W): 750-1125


1) Electric Installation

Leakage protection switch must be amounted in the bathtub power supply and the power supply circuit must be fixed and well grounded. The section area of wire must not less than 2.5 mm^2 and electric circuit must be the tally with national safety requir ements which must be earth connection at earthing mark on the steel frame of bathtub(leakage protection switch will be connected by users)

2) Parts Name

(Rectangular models)

- | | |
|------------------------|---------------------|
| 01 、 Hand shower | 07 、 Massage nozzle |
| 02 、 Feed cock | 08 、 Air adjuster |
| 03 、 Hot water switch | 09 、 Air switch |
| 04 、 Cross valve | 10 、 Speaker |
| 05 、 Cold water switch | 11 、 Arm-rest |
| 06 、 Pillow | 12 、 Towel shelf |

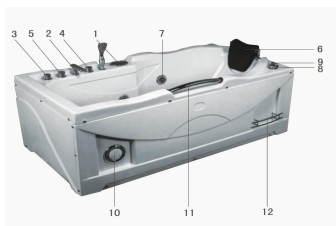

(Corner models)

- | | |
|-----------------------|---------------------|
| 01 、 Hand shower | 06 、 Computer panel |
| 02 、 Feed cock | 07 、 Massage nozzle |
| 03 、 Hot water switch | 08 Pillow |
| 04 、 Cross valve | 09 、 Speaker |
| 05 、 Auto drianer | 10 、 Towel shelf |



3) Water-supply Installation


01. Piping installation

a. Water supply


Before leaving factory the cylinder tube has been connected inside bathtub. Users just need to connect the external cold&hot water hose to the responding pipe joint. Pipe joint should be amounted at the hidden position behind bathtub.

b. Water drainer

connect to the drain pipe to waste hole. Shown as right picture:

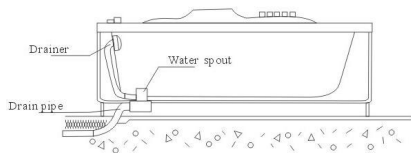

02. Water-supply diagram

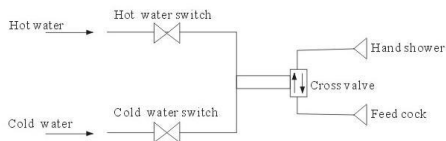

4) Using Methods

- Switch on the power supply
- Turn on cold and hot water switch and adjust water at a suitable temperature, choose cock and faucet by transfer switch.
- Only when the water level is above the nozzle, can you switch on the water pump to start hydraulic massage.
- Adjust the massage force by air control valve.
- Adjust shower massage by revolving faucet.
- After having finished turn on water pump air switch to dewater bathtub by revolving drainer.
- Shut off power supply.

5) Clean & Maintenance

- can use neutral liquid detergent and soft cloth to clean surfing bathtub, detergent containing acetone and ammonia are prohibited to use;; while disinfecting forbid to use disinfectant containing formic acid and formaldehyde .
- if there are scrapes on the surface of bathtub, only polish it with 2000# waterproof abrasive paper and coat toothpaste then polish them soft cloth.
- Because the water scale can contain slight acid detergent such as citric and vinegar, you can heat them and clean with soft cloth.
- If there is hair on back water hole and nozzle, please clean them at once.
- Chromate-plating surface needn't wipe frequently.

- f. Tool with rough surface, detergent containing chemical solvent are forbidden to use.
- g. After having finished must drain out the water thoroughly and shut off power.
- h. Neither knock the surface of bathtub with hard tool or knife nor let dog-end and heat source above 100c touch the surface of bathtub.
- i. Clean hydraulic massage equipment fill in 40c hot water and add in detergent according to proportion of 2 gram detergent per liter water. Star hydraulic massage for about five minutes and stop to drain water out, then fill in cold water and star hydraulic massage for about three minutes and train water out to clean bathtub.

6) Safety Notice

- a. Installation and maintenance must be carried out by qualified electrician.
- b. Power supply parameter must be tally with national standard, leakage protection switch must be amounted in the bathtub power supply and the power supply circuit must be fixed and well grounded. Pay attention to keep way from moisture for switch, socket and plug.
- c. Over-heated water are not allowed to use and must switch cold water first then hot water. Don't use until water is above nozzle.
- d. After having finishing shut off power immediately.
- e. This appliance is most intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible their safety.
- f. Children should be supervised to ensure that they do not play with the appliance.

!!! If massage bathtub can not be operated normally, please check them according to POINT 7 to remove troubles. In case that you have no methods to repair it, please contact our distributors or local service department.

Note: The appliance is used in a moisture place, though the manufacturer have take adequate safety measures, installation maintenance must be carried out by qualified electrician, the appliances must be permanently connected of fixed wiring.

7) Trouble Shootings

Trouble	Cause	Remedy
Water pump does not work	Power is not on and leakage protection switch is off	Turn on power and leakage protection switch
	Dirt block the pump vane	Remove dirt
	Pump switch is not on	Turn on pump switch
	Water pump damaged	Repair or replace the pump
	Air pipe and switch loose or leakage	Fasten air pipe and check air switch
	Power plug loose	Plug power plug
Air pump does not work	Power isn't normal	Check power circuit and plug power plug
	Air pipe and switch loose or leaked	Fasten air pipe and check air switch
	Air switch is off or damaged	Check air switch
Massage force can't be adjusted	Voltage is not normal	Check air switch
	Adjusting switch is off or damaged	Check adjusting switch or replace it
	Backwater hole is blocked	Clean backwater hold
Bathtub isn't horizontal	Supporting leg aren't adjusted well	Adjust supporting leg
Water leakage out of pipe	Seal ring damaged	Replace seal ring
	Nut is not locked	Lock nut
	Bad sealed between interface	Keep well glued between interface
Apron isn't well installed	Adjust apron support aimed at apron screw position	